



---

# Elektromagnetisme og bølger

## Lab rapport

---

# Transients and RC Circuits

---

### Authors:

Thorsten Bæk

KU- ID: kmg386

Ryan Yde

KU- ID: knb392

Jens Kinch

KU- ID: mqt845

### Abstract

#### LILLE ABSTRACT

This paper includes 6 pages.

The paper has been handed in online on the DATO

# Introduction

In this experiment we will look at the transient response of an RC-circuit and its properties as a frequency filter. We will test the characteristics of the circuit using a square wave and a sinusoidal pulse. Using the data obtained by the digital oscilloscope, we will determine the time constant  $\tau = RC$  experimentally, the scaling function  $g(f)$  and the phase shift  $\phi(f)$

## Theory

### Direct current

The square wave behaves like direct current in the period of time, where the current is at a stable level. This means that we can apply Kirchhoffs laws for direct current.

For the system in Fig.1, Kirchhoffs law states the following

$$\mathcal{E} = IR + \frac{1}{C} \int I(t) dt \quad (1)$$

and we can differentiate to get the following

$$0 = IR + \frac{1}{C} I \quad (2)$$

Solving this differential equation with the boundary condition that  $I(0) = \mathcal{E}/R$  gives us

$$I(t) = \frac{\mathcal{E}}{R} e^{-\frac{1}{RC}t} \quad (3)$$

Using  $U = RI$  we can find the voltage drop over the resistor

$$U_R = \mathcal{E} e^{-\frac{1}{RC}t} \quad (4)$$

If we want to find the voltage drop over the capacitor, we know that  $U_C = Q/C = \frac{1}{C} \int I(t) dt$ . Solving this with the boundary condition  $U_C(0) = 0$  we get

$$U_C = \mathcal{E} \left(1 - e^{-\frac{1}{RC}t}\right) \quad (5)$$

## 0.1 Alternating current

For a RC-circuit as in Fig.1 the following apply according to Kirchhoffs laws

$$\tilde{U}(t) = \tilde{I}(t)Z \quad (6)$$

where  $\tilde{U}$  is the complex voltage,  $\tilde{I}$  is the complex current and  $Z$  is the impedance. Then we have the complex current

$$\tilde{I}(t) = \frac{\tilde{U}(t)}{Z} = \frac{\tilde{U}(t)}{|Z|}e^{-i\phi} \quad (7)$$

with  $Z = R + i/\omega C$  where  $R$  is the resistance,  $\omega$  is the angular frequency and  $C$  is the capacitance. If we write  $Z$  in polar coordinates we get the form  $Z = |Z|e^{i\phi}$  where  $|Z| = \sqrt{R^2 + (1/\omega C)^2}$  and  $\phi = \arctan(1/R\omega C)$

We want to find the voltage drop over the resistance

$$\tilde{U}_R(t) = R\tilde{I}(t) = R\frac{\tilde{U}(t)}{|Z|}e^{-i\phi} \quad (8)$$

We know that our alternating complex voltage is  $\tilde{U}(t) = V_0e^{-i\omega t}$ . We now want to find the real voltage

$$U_R(t) = \mathcal{R}[\tilde{U}_R(t)] = R\frac{1}{\sqrt{R^2 + \left(\frac{1}{\omega C}\right)^2}}V_0 \cos(\omega t + \phi) \quad (9)$$


The factor  $g = R/\sqrt{R^2 + (1/\omega C)^2}$  is a scaling factor between the input voltage and the voltage drop over the resistor. We see that a small  $\omega$  will result in a small  $g$  meaning that the voltage drop over the resistor will be smaller than the input voltage, the voltage is strongly damped. For large  $\omega$ ,  $g$  will approach 1, so almost no damping.

The phase shift is  $\phi = \arctan\left(\frac{1}{\omega RC}\right)$ .

In this experiment we will work with a resistance  $R = 1000\Omega$  and capacitance  $C = 47\text{nF}$ . We can anticipate a behavior for  $g$  as a function of  $\omega$  as depicted in Fig.2a.

Furthermore we can anticipate a behaviour for  $\phi$  as depicted in Fig.2b

**Figure 1 – Setup for high pass filter**

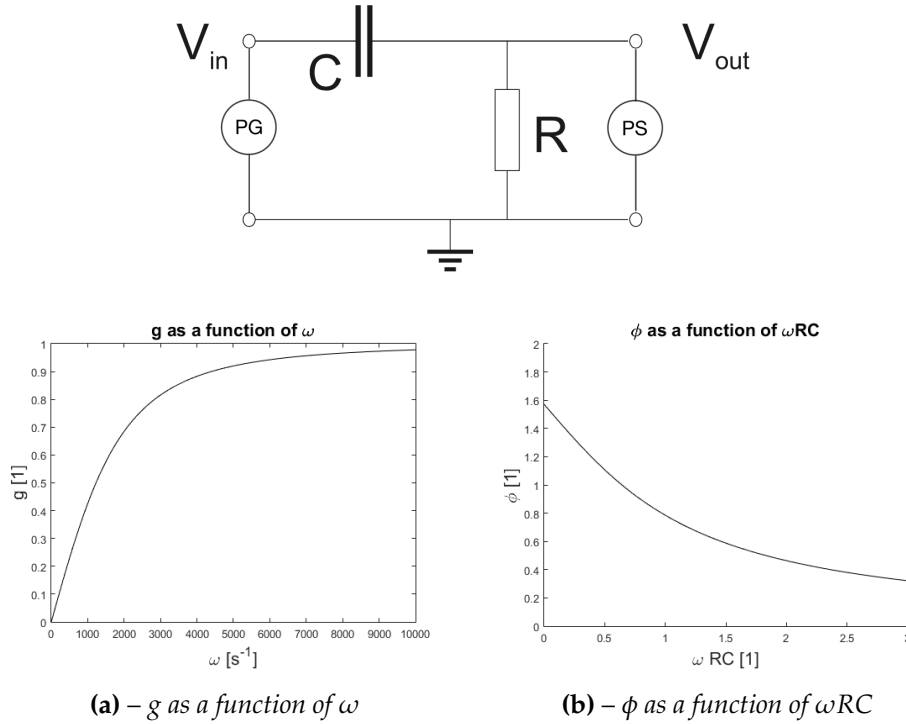

## Setup

The setup is as in Fig.1 with PG representing a pulse generator and PS representing a Picoscope which is a digital oscilloscope. With the oscilloscope, we are measuring the voltage drop over the resistor.


We are using a resistor with resistance  $R = 10k\Omega$  and a capacitor with capacitance  $C = 47nF$ .

## Experiment 2 – High-pass-filter

### Square wave

We know that the capacitor will be charged with time, so we should be able to find a frequency of the square wave where the capacitor is almost fully charged and fully discharged within the time of the pulse width. As the capacitor is charged, the voltage drop over the resistor will increase, and decrease as the capacitor is discharged. When a useful frequency and pulse width is determined, we get a good representation of the curve of the voltage drop over the resistor or capacitor, depending on the current system configuration. In Fig.3 we see the input voltage and the corresponding voltage drop over the capacitor and resistor. Please note that the configuration of the setup is not the same when measuring the two independent voltage drops.

**Figure 3 – Setup for high pass filter**

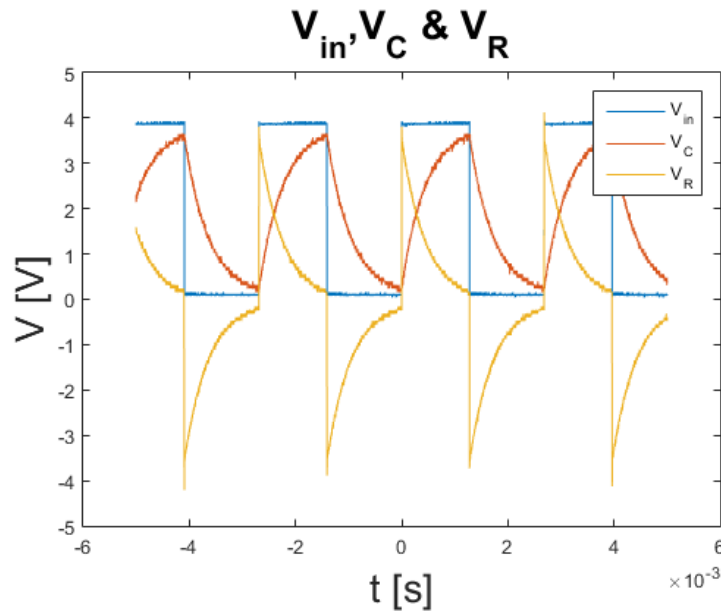

## Alternating current

We replace the pulse generator with a function generator to produce an alternating current in the form of a sine wave. The frequency is set as close as possible to  $f = \omega_0/2\pi = 340.4\text{Hz}$  and the amplitude adjusted so that the input voltage measured on the Picoscope is 1V peak-to-peak.

We then alternate the frequency from around 100Hz to 1000Hz and measure the output voltage and phase shift. See Fig.1 for measurements made directly in the software for the Picoscope.

**Table 1 – Data from experiment 2**

Frequency input [Hz] $\pm 5 \cdot 10^{-2}\text{Hz}$	Peak to peak input [V] $\pm 5 \cdot 10^{-5}\text{V}$	Peak to peak output [V] $\pm 5 \cdot 10^{-5}\text{V}$	Phase shift [ms] $\pm 5 \cdot 10^{-4}\text{ms}$
108.0	1.040	0.4365	8.055
201.1	1.048	0.5952	4.226
300.5	1.040	0.7698	2.888
339.4	1.040	0.8095	2.565
400.5	1.040	0.8571	2.212
500.6	1.048	0.9571	1.806
599.4	1.040	0.9474	1.543
699.0	1.048	1.0050	1.332
901.1	1.049	1.0350	1.050
999.9	1.048	1.0550	0.958

**Table 2** –  $\tau = RC$  for the square wave system

	$\tau = RC$ [s]	Uncertainty [s]
Theoretical	$4.68 \cdot 10^{-4}$	
Experimental	$4.3 \cdot 10^{-4}$	$\pm 0.4 \cdot 10^{-4}$
Difference	$0.4 \cdot 10^{-4}$	

# 1 Data processing


## Square wave

To determine the time constant  $RC$  we fit the measured time dependent voltage drop over the resistor applying Eq.3.

## Alternating current

We want to check the scaling factor  $g$  by plotting the output voltage as a function of  $\omega$ . Since the fit is an exponential function and the theoretically derived  $g$  is in another form, fitting an exponential curve to the measured data will make comparison difficult. So we will plot the measured output voltage against  $g \cdot V_{in}$  and do a  $\chi^2$  test to determine whether or not the measured values are within an acceptable range of the theory. We arrive at the results in Table.CHII.I.ANDEN.FOR.G with a visual representation in Fig.4

**Figure 4** –  $V_{out}$  as a function of  $\omega$

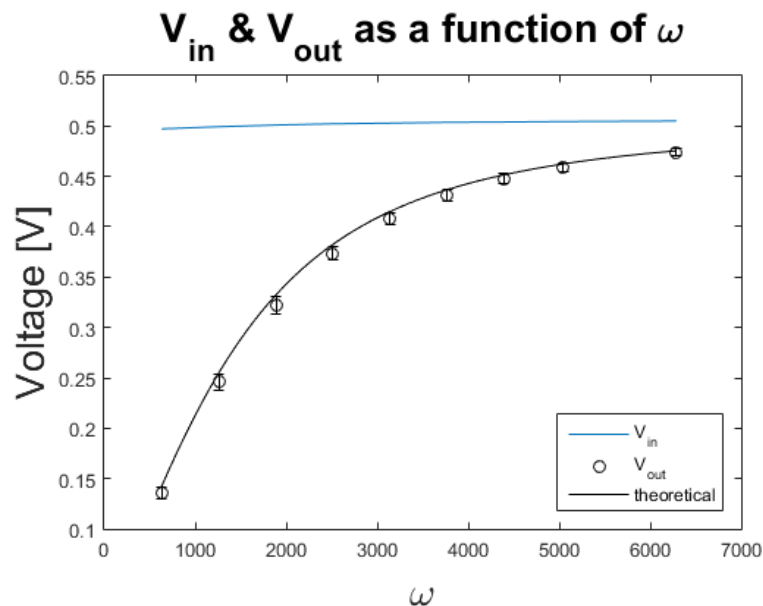

For the phase shift, we plot the phase as a function of  $\omega$ . As with  $g$  the fit will be

on another form than the expression earlier determined for  $\phi$ , so we will evaluate the measured results by plotting them with the theoretical values. The results are presented in Table.CH1.I.ANDEN.FOR and in Fig.PLOT.AF.PHI.MOD.THEO

## 2 Uncertainties

The measurements have very limited uncertainties since the digital oscilloscope used is very precise. In our calculations we have estimated the wires and contacts to be without any resistance which is not entirely correct.

## 3 Conclusion

The measurements are close to the theoretical values but not within range of the error. Since the measurements are all shifted in the same direction a systematical error seems to be present. NOT FINISHED

## 4 References

Text